



## INSTALLATION INSTRUCTIONS FOR 090-041 GL1500 REAR FLASHER

1. Remove the trunk lower cover by taking out the four mounting screws and pulling down gently on each side to disengage from the tabs on the trunk side lights.
2. Unplug the 6 pin connector that plugs in vertically just behind the light housing and the 2 pin connector that goes to the trunk marker light.
3. Now plug the flasher harness back in between each set of connectors. Do the same on each side (right and left).
4. Turn the ignition switch ON and check the operation of the flashers.
5. Tuck the excess wires out of the way and replace the trunk lower cover.

