

Deluxe Passenger Controller

For All Honda GL1800 or GL1500

***PSCR-GL1800** or ***PSCR-GL1500**

Installation and Operation Instructions


Installation Instructions


- 1. Remove seat.
- 2. Unplug the existing passenger headset connection cable pigtail from the 6-pin plastic plug located under the seat and connect in its place, the corresponding 6-pin red plastic plug from the 'J&M Passenger Controller. (Figure A)
- 3. Reconnect the existing passenger headset pigtail to the corresponding 6-pin red plug on the J&M passenger controller.
- 4. To connect the CB PTT switch from the controller to the **GL-1800** wiring harness, locate the open black 2-pin female connector, normally positioned just forward of the crossbar, under the seat. Plug the 2-pin black connector from the passenger controller into this plug. (the 6-pin brown plug on the controller will NOT be used for the GL-1800 connection.
- 5. To connect the CB PTT switch from the controller to the **GL-1500** wiring harness, locate the open brown 6-pin female connector, normally positioned just forward of the crossbar, under the seat. Plug the


6-pin brown connector from the passenger controller into this plug. (the 2-pin black plug on the controller will NOT be used for the GL-1500 connection)

- 6. Connect the black negative lead from the power harness of the passenger controller to the frame on both the GL-1800 and GL-1500.
- 7. Connect the red positive lead to the positive accessory terminal behind the left side cover on both the GL-1800 and GL-1500.
- 8. Move the controller module to an area just above right saddlebag.
- 9. Re-install the seat and install the passenger controller on the right inside grab- handle using the mounting plate and Velcro strap provided. **(Figure B)**

Fig. A

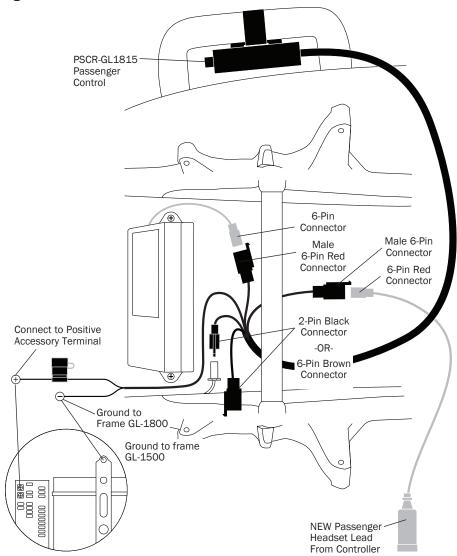

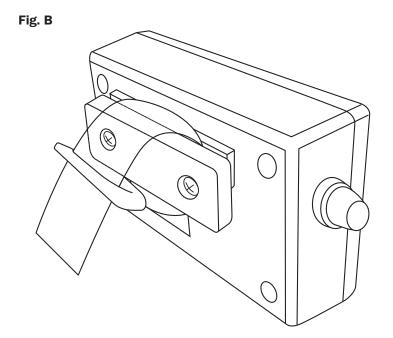

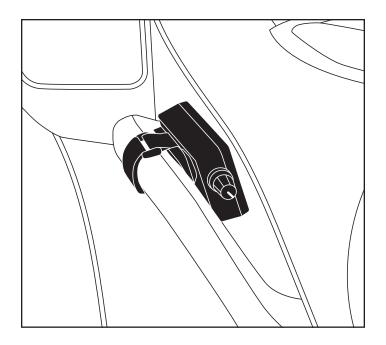


Operation

Volume Control: To increase the helmet headset volume, rotate the control knob clockwise and to decrease, rotate counterclockwise. Please note that this volume control will affect all audio features, including the intercom. Therefore, if you rotate the control to a very low volume you may not be able to hear the driver over the intercom portion of the system. Additionally, this control can only raise the helmet audio level to the maximum level of the main system which is set by the driver.

CB Transmit Button: The CB PTT transmit button allows for passenger initiated CB transmission, if your Gold Wing is so equipped. Depress and hold down on the PTT button for the duration of the CB transmission.

Passenger Microphone Interrupt Switch: Depress this switch to the forward (ON) position to activate the passenger's microphone and to the rear (OFF) position to turn off the passenger's headset microphone.

NOTE: It is not necessary to return the passenger microphone interrupt switch to the ON position before you transmit on the CB. The passenger CB transmit button will initiate CB transmission with the passenger microphone interrupt switch in either the ON or OFF position.

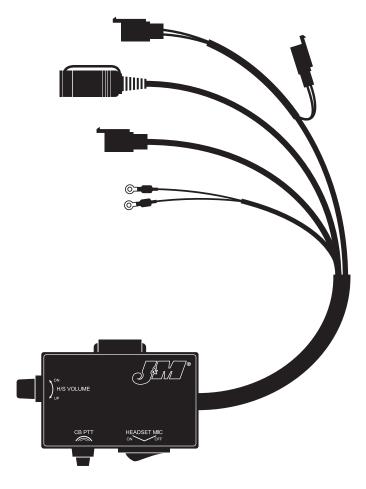

Thank you for the confidence you have shown in J&M Corporation by purchasing one of our innovative products.

If you have any question or comments about this product, you may contact us at USA 1-520-624-7000 Monday thru Friday, 8:00AM thru 5:00PM Mountain Standard Time.



1415 S. Cherry Avenue Tucson, AZ 85713 U.S.A. Tel (800) 358-0881

Website: http://www.jmcorp.com E-mail: audio@jmcorp.com

WARRANTY AND REPAIR INFORMATION

TWO YEAR LIMITED WARRANTY In order to facilitate the servicing of this warranty, the Warranty Registration Form should be filled out and returned within 10 days of the date of purchase. However, return of the Warranty Registration Form is not a precondition of this warranty, and this Warranty will be observed by J&M CORPORATION whether or not the Warranty Registration Form is returned. on the condition that other satisfactory evidence of the date of the original purchase is provided to J&M CORPORATION.

WHO PROVIDES THE WARRANTY? This warranty is provided by J&M CORPORATION.

WHO IS PROTECTED? This warranty is extended only to the original owner of this J&M CORPORATION product and may not be transferred or assigned.

WHAT IS COVERED AND HOW LONG? This warranty covers all defects in material or workmanship of our product for a period of 2 years from date of original retail purchase. At its option, J&M CORPORATION will repair or replace any defective part(s) or equipment.

The provisions of the warranty shall not apply to any unit which has been subjected to misuse, neglect, incorrect mechanical or electrical installation, unauthorized modifications, accident, nor to units which have been repaired or altered outside of our factory.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY In the event that the product does not conform to this warranty, the product should be shipped prepaid to the J&M CORPORATION service facility. Transportation charges, insurance fees, and labor costs for shipment, removal, or reinstallation of our product are not covered by this warranty. Loss or damage in shipment is the sole responsibility of the freight

FOR YOUR INFORMATION Repair as provided under this warranty is the exclusive remedy of the consumer. J&M CORPORATION shall not be liable for any incidental or consequential damages or for breach of any express or implied warranty on this product. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of the warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights which vary from state to state.

J&M CORPORATION reserves the right to make changes in design and to make improvements in its products without the obligation to incorporate the changes or improvements in any of its previously manufactured products.

J&M CORPORATION has not authorized anyone to make representations or warranties other than the warranty contained herein.

The above warranty is effective for all products manufactured after 10/01/86.

NON-WARRANTY REPAIR RATES J&M CORPORATION reserves the right to change the labor repair rates without prior notice. At the time of this printing the out-of- warranty repair is \$40 per hour for labor only. However, the customer is advised to verify the current rate when he/she calls customer service to obtain the return authorization number.

FACTORY SERVICE ADDRESS J&M Corporation, 1415 S. Cherry Avenue, Tucson, Arizona, 85713, U.S.A. Tel: 1-800-358-0881 audio@ jmcorp.com www.jmcorp.com

CUSTOMER SERVICE NUMBER 1-800-358-0881



Date of purchase

Name of dealer it was purchased from ____

and serial number (if applicable) are legible. This will help us to serve you better. (PLEASE PRINT) Address _____ Zip ____ State City _ Motorcycle O Other O E-mail _____ Make _____ Model ____ Product part number ___ J&M Corporation Serial number (if applicable)____

WARRANTY REGISTRATION FORM Please fill out this card completely and mail it immediately after purchase. Please be sure that your zip code

1415 S. Cherry Avenue Tucson, AZ 85713