




INSTALLATION INSTRUCTIONS FOR 090-140 GL1500 FRONT FLASHER

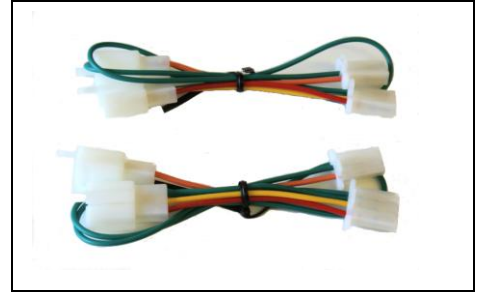

1. Remove the following:
 - Upper headlight louver
 - Both right and left fairing pockets
 - Turn signal housing
2. Locate the fairing marker light harness plug (2 pin connector) and the turn signal light plug (3 pin connector).
3. Unplug both connectors and plug the flashers harness back in between the connectors. Do this on both sides (right and left).
4. Turn the ignition switch to ON and check the operation of the units by flipping the turn signals on right and left.
5. Re-install pieces in the reverse order that they were disassembled.

133 Gold St, Worcester, MA 01608 508-791-7552 800-821-9861 fax 508-793-2919 email: info@addonaccessories.net