




Installation Instructions 373-176 Rotor Covers

NOTE: READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING

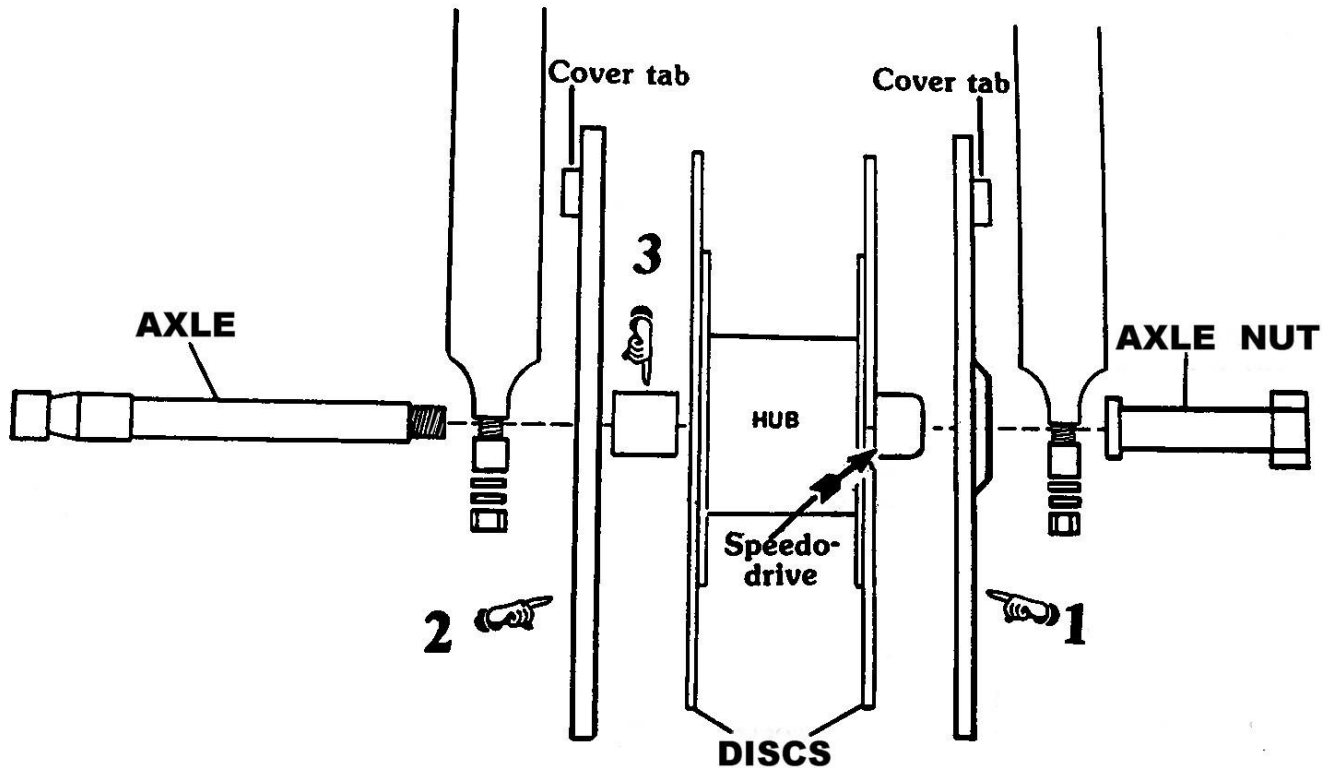

CAUTION: If, after rotor cover installation you find it necessary to remove front wheel assembly for maintenance or any reason, special care should be taken. It is suggested you loosen fork brace before removing wheel. This allows fork legs to spread. Then carefully remove wheel assembly, being sure not to scratch or dent cover where speedo drive tab makes contact with cover. Refer to your service manual.