
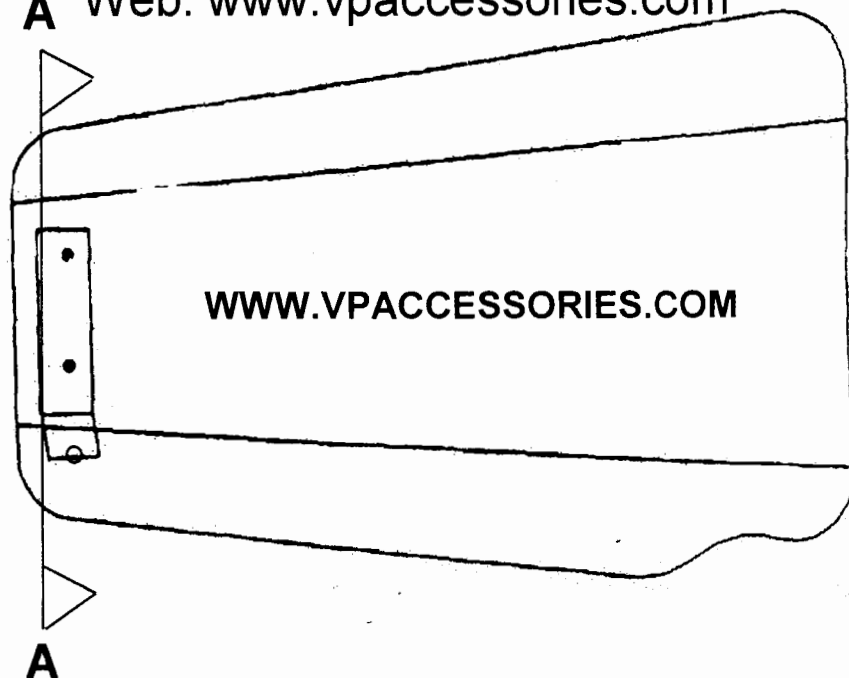


Designed and Mfg. by V&P
77 Milton Ave
Blackstone, MA 01504
Tel 508-883-0317

Email vpjean@aol.com

Web: www.vpaccessories.com

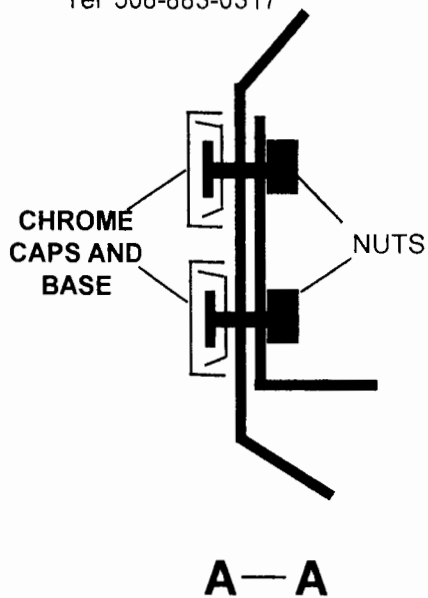

Assemble with hardware shown, with angle on bracket towards the curved notch on hand warmer. curved notch is designed to clear top Wind Wing if you have dual wings. If it still touches top wing, your handlebars may have been set too low. To raise the handlebars, remove the key cover and cover on center of handlebars, loosen the four bolts and raise bars till they clear. Tighten bolts and replace covers.

To install, remove nuts from bottom of clutch and brake levers, install Hand Warmers and replace nuts.