



## MOUNTING INSTRUCTIONS FOR 17-7503 GL1100-1200 Fairing Wind Deflector

Note: Read instructions thoroughly before installing. **Drilling Required.**

1. Place bike on center stand.
2. Locate the color matched edge trim that runs from the mirror to the lower's top edge.
3. Along the outer edge of the fairing, measure one inch up from the bottom edge of the trim and drill a 10 mm hole all the way through the fairing lip and then deburr the hole. Figure 1.

**Note:** *Before drilling, make sure that the edge trim is fully seated on the fairing lip. As a precaution, press gently against the edge trim as you drill.*

4. Install the lower bracket arm of the wind deflector through the lower hole with the wing facing directly rearward with the bolt and washers provided. Fasten bracket loosely.


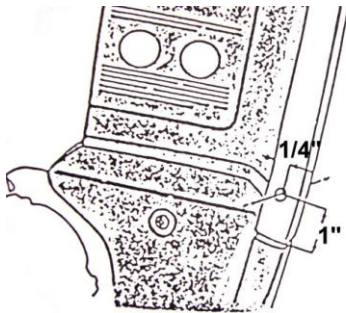


Figure 1



5. Move top arm to upper portion of fairing edge trim and mark drilling guide on fairing trim edge. Drill a second 10mm hole. Attach upper arm with bolt and anchor provided.
6. Tighten both bolts securely. Adjust wind deflector with chrome knobs.
7. Repeat on reverse side.



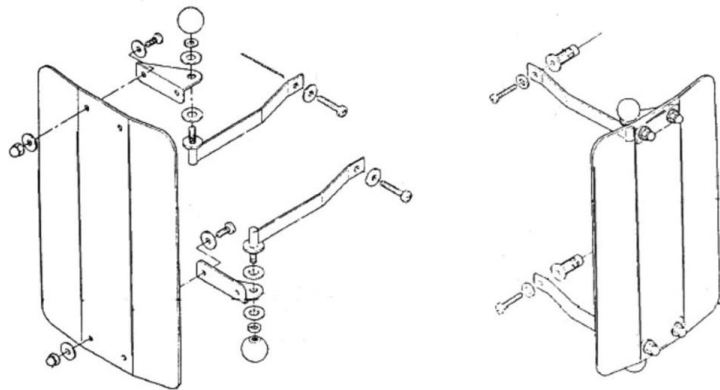