



INSTALLATION INSTRUCTIONS For the GL1800 Driver Floorboards 18393-545

Note: Read instruction thoroughly before installing.

1. Place bike on center stand.
2. Assemble shifter per figure 1 and 2. Place pegs in holes providing the most comfortable fit for your foot.

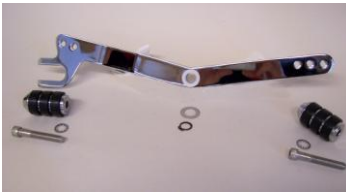


Figure 1



Figure 2



Figure 3

3. Remove the two bolts that hold the driver peg supports on both side of the bike and set aside bolts. The bolts will be use to install floorboards. Figure 3.



Figure 4



Figure 5



Figure 6

4. Remove the bolt that holds the brake pedal arm and set aside to be used later. Figure 4. Remove arm.
5. With the new brake pedal provided, align and mark for 5/8 inch hole. Figure 5. Drill the hole in the original brake pedal and using bolt provided, attached the new brake pedal. Reattach brake to the bike using the original bolt. Figure 6.
6. Attach brake side floorboard with the original bolts. Figure 7.
7. Attach the clutch side floorboard with the original bolts. Figure 8.



Figure 7
Completed Brake Side



Figure 8
Completed Clutch Side