




## Mounting Instructions

### Part 20-64B2

### LED Windshield Edge Light

**Note: Read all instructions thorough before installing.** Follow local laws before riding with accent lights on.

1. Check lights before installing. Black to ground and red to power.
2. Remove backing from the light and place at the bottom of the chrome channel.

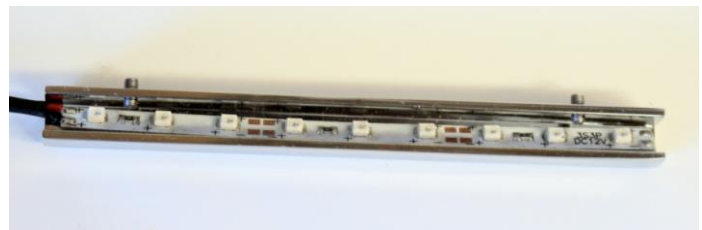

3. Attach chrome channel on to the side of the windshield to desired location.
4. Tighten set screws with the Allen wrench provided.
5. Wire black to the ground and the red to the power supply.

