



MOUNTING INSTRUCTIONS
For 45-1629NUB
GL1800 Chrome Side Fairing with Mesh Grill Accents

NOTE: Read instructions thoroughly before installing. Work one side at a time.

1. Place bike on center stand.
2. Thoroughly clean outside surface of the chrome air intake area where inserts will be install with rubbing alcohol pads- provided.
3. Using the silicone provided, run a bead of silicone as shown in figure 1.
4. Carefully place insert mesh into place.
5. To install air intake side accent with mesh insert, thoroughly clean outside surface of air intake area where inserts will be install with rubbing alcohol pads- provided.
6. Using the silicone provided, run a bead of silicone as shown in figure 2. Note: Two sided tape can be used instead of silicone if desired. Two side tape is provided.
7. Press the accent into place. Note: You may want to use masking tape or a soft material to protect the chrome while placing the piece on the bike.
8. Using two wire ties, secure the chrome accent by wrapping the wire ties through the original radiator grill as shown in figure 3.
9. Repeat on the other side.
10. Wait at least 12 hours before removing wire ties.

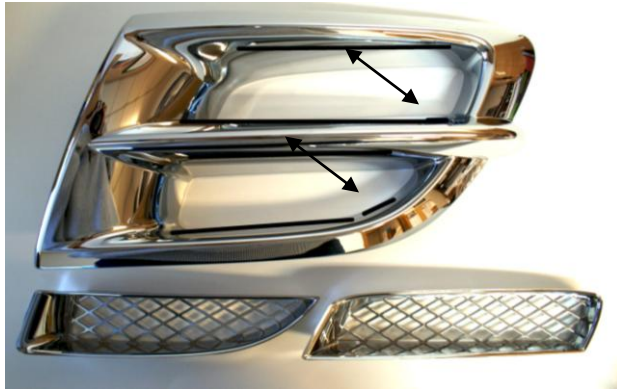


Figure 1



Figure 2



Figure 3

