



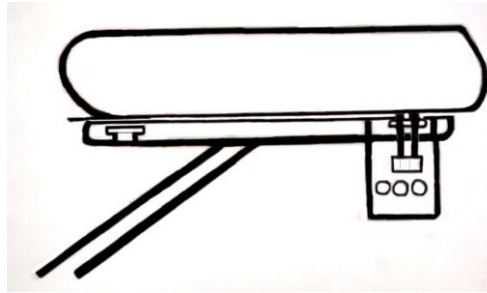

Installation Instructions for Part MK-P PASSENGER MUGGER

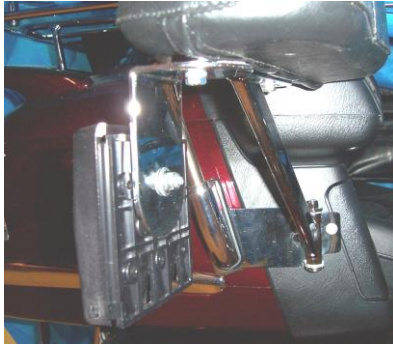

1. Remove the front bolt from the armrest on either of the right or left side.
2. Install the mount with the new bolt.
3. Install the mugger drink holder to the tab.

CAUTION: Do not exceed 0.85 pounds. LIMITED WARRANTY: Add On Inc. warrants that any of their products sold hereunder, if properly installed, maintained and used under normal conditions shall be free from defects in material and workmanship for a period of one year from the date of purchase. CONSEQUENTIAL DAMAGES. Add On Inc. shall not be liable for any consequential or incidental damages what so ever.

133 Gold St,Worcester,MA 01608 800-821-9861 fax 508-793-2919