


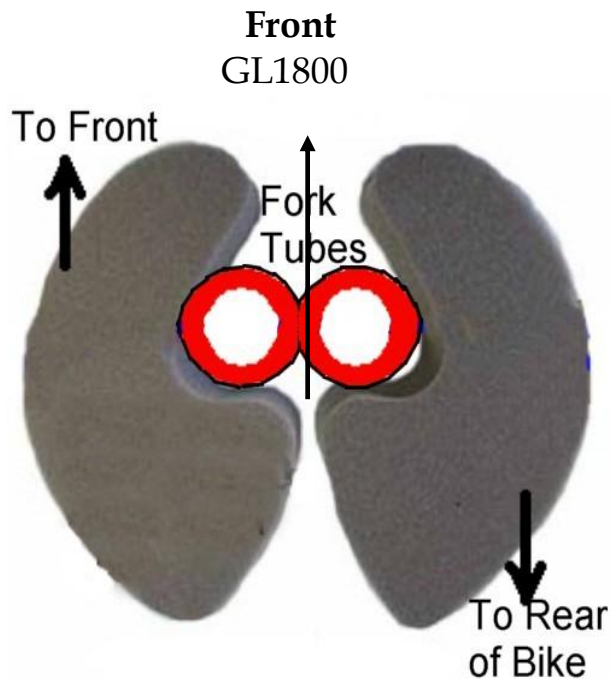

Installation Instructions for GL1800 Tunnel Fillers Part 18269

Turn handle bars to left side. From under the fairing on right side, push the filler up into the opening with the larger part toward the rear and push to the top. Note: Do not protrude above the opening where the driver can see through. Turn the bars to the right and repeat procedure. When bars are returned to the proper position, the foam will be crushed, allow inserts to return to their original state. .



133 Gold Street Worcester, MA 01608 PH: (508)791-7552 800 821-861 800-821-9861 FX: 508-793-2919
www.addonaaccessories.net info@addonaaccessories.net