



## MOUNTING INSTRUCTIONS FOR 45-1232 GL1800 CHROME MIRROR HOUSINGS

NOTE: Read instructions thoroughly before installing.

USE SCREWS PROVIDED WHEN REASSEMBLING.



1. Place bike on center stand.
2. Remove the screw and mirror from the rearview mirror housing. Figure 1
3. Remove rearview mirror: Figure 2
  - a. Remove the mirror boot from the front fairing.
  - b. Remove the trim clip, screw and mirror cover.
  - c. Remove the three screws, bracket and mirror.
  - d. Disconnect the turn signal light 3P connector.
4. Remove the three screws holding the directional light in the housing. Remove the turnsignal. Figure 3
5. Install new chrome housing using the screws provided and install parts in reverse order.

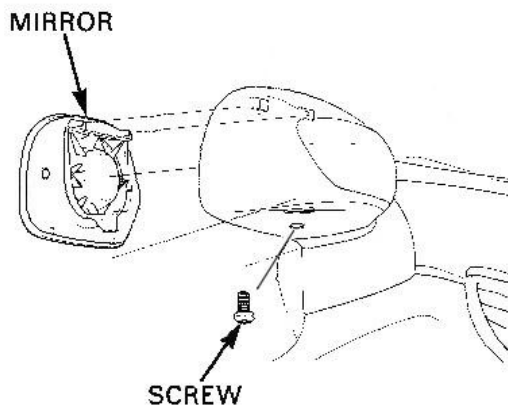


Figure 2

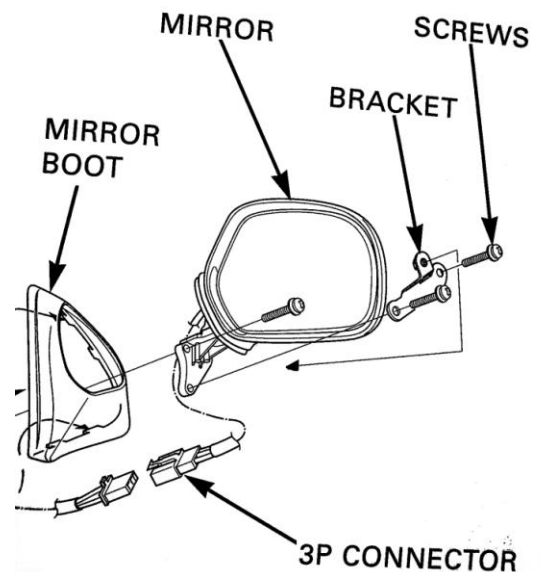


Figure 1

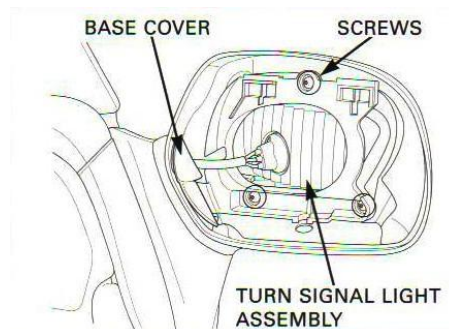


Figure 3