



MOUNTING INSTRUCTIONS  
FOR  
45-1812 GL1800 CLEAR SADDLEBAG LIGHT

Read instructions thoroughly before installing.

1. Place bike on center stand.
2. Open the saddlebag lid.
3. Remove the three nuts and the brake/taillight from the saddlebag. See Figure 1.
4. Remove the bulb socket from the brake/taillight by turning it counter clockwise. Figure 2 and 3.
5. Install the new clear trunk light and install the removed parts in the reverse order of removal.

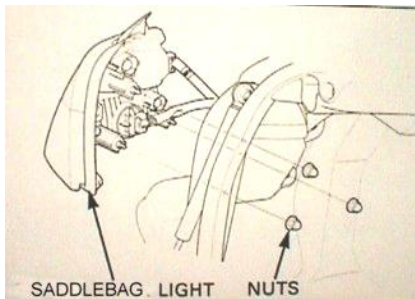


Figure 1

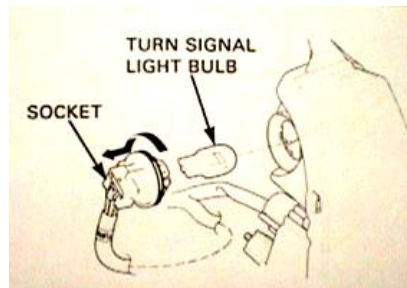


Figure 2

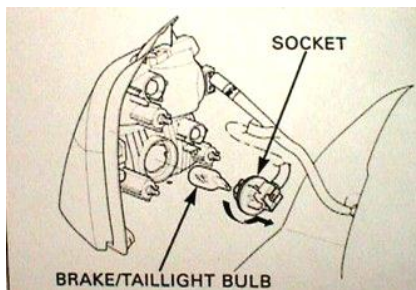


Figure 3

