



## MOUNTING INSTRUCTIONS FOR 45-1836 GL1800 LED LIGHTED FILLER ACCENT


Note: Read instructions thoroughly before installing.

1. Place bike on center stand.
2. Remove the rear fender per service manual instructions.
3. Remove license plate mount.
4. Clear rear fender with alcohol.
5. Align and install part 45-1836 with two-sided tape provided.
6. Install license plate mount with spacers, new bolts, washers and locknuts provided. See Steps.
7. Connect light to the applicable wiring on motorcycle.
8. Re-install rear fender per manual instructions.


Wiring: Black – Ground  
Yellow – Running  
Red - Brake




Not Lighted

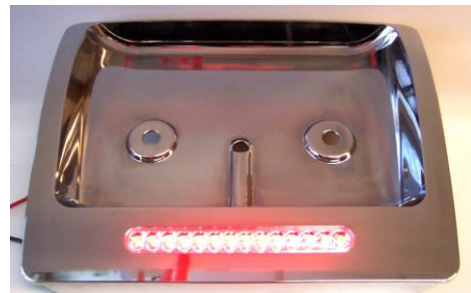

Lighted

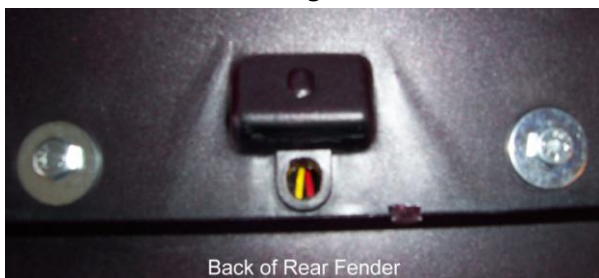

Back of Rear Fender  
Hardware Step 1

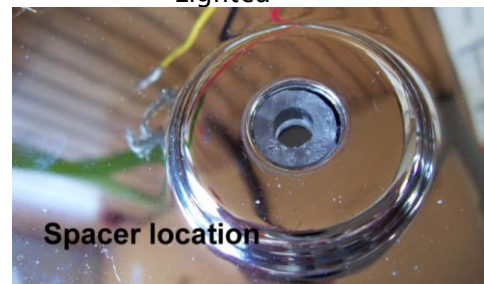

Spacer location  
Hardware Step 2



Hardware Step 3



1/4"  
Spacer    M6 x25 Bolt    M6 Washers    M6 Lock Nut