



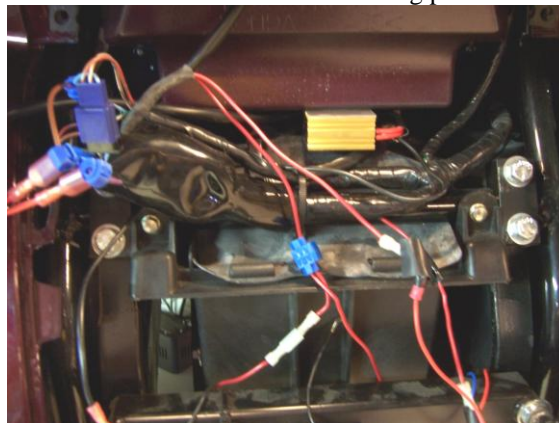

INSTRUCTIONS FOR PART E34-0107 LED LOAD EQUALIZER

NOTE: *This equalizer will work on all LED lights wired into the turnsignal system.*

1. Place bike on center stand.
2. Remove rear fender per service manual instructions.
3. Locate the turnsignal wires. Identify the positive wire for the left and right side turnsignals.
4. Wire the red wires from the load equalizer into the turnsignal system of the bike by crimping the supplied T-taps on each wire and plugging the red wires into the taps. One wire to the left side turnsignal and one wire to the right side.
5. Wire the black wire from the load equalizer into any ground wire in the same manner.
6. Attach the load equalizer to a secure place on the bike where the wires will not interfere with moving parts.

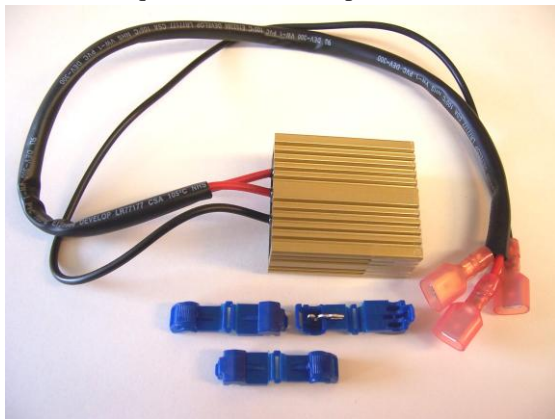

133 Gold St, Worcester, MA 01608 508-791-7552 800-821-9861 fax 508-793-2919 email: info@addonaccessories.net